

# IMPORTANT INFORMATION

## HM-0725 BATTERY FOR CONTROL PANEL 2

To be able to reduce lead time and meet our customers' requirements, we are using two different batteries. The performances and capacity are the same and the replacement can be done without any updates of software or hardware.

Sealed Lead-Acid battery, rechargeable 6,8 Volt, 2,5 AH.




Standard battery



Alternative battery

- 1 Unscrew top lid from CP2, 4 pcs with an PZ2 screwdriver. Remove the old battery and disconnect the white socket.

- 2 Put the new battery in position. Connect the white socket.

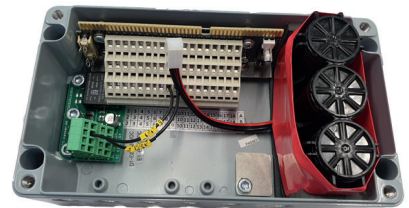

- 3 Remove the foam in the top lid.



- 4 Put lid back again and tighten the screws.

